


# LDTR Feet Assembly Instructions

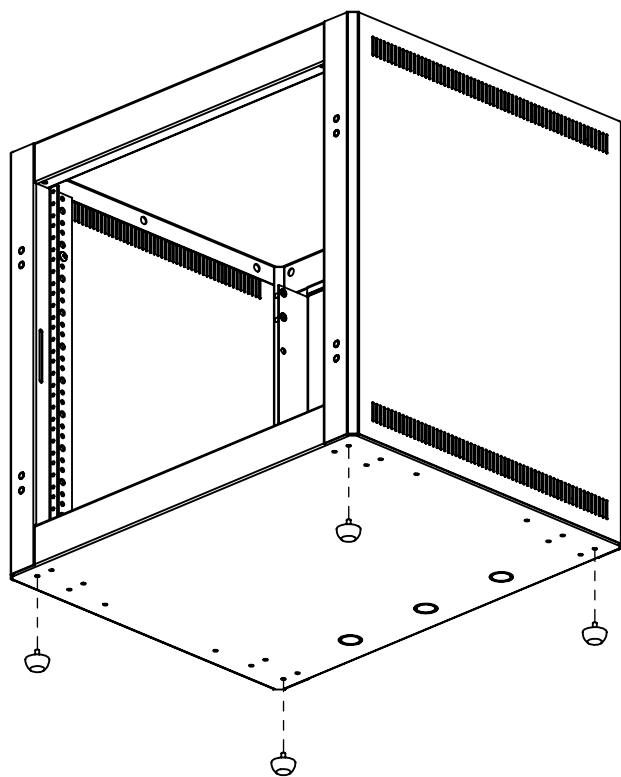

Plastic feet are provided with this cabinet.

Position the threaded end of the cabinet feet as shown. Insert the threaded end of the feet through the holes in the bottom of the cabinet.

Secure each of the feet with a 10-32 keps nut.

**P/N: 17987**

Hardware:

- 4 Plastic Bumpers (P/N: 4044)
- 4 10-32 keps nuts (P/N: 4045)